

## MRK3 MRI RF Shielding Effectiveness TEST KIT



## OWNER/USER MANUAL REV 1.2



## TABLE OF CONTENTS

<b>Chapter 1</b>	<b>Page</b>
Specifications.....	2
Signal Source Specifications.....	2
Receiver Specifications.....	2
Antenna Specifications.....	3
 <b>Chapter 2</b>	
MRK3 Front Panel Signal Source.....	4
MRK3 Front Panel Receiver.....	6
 <b>Chapter 3</b>	
MRK3 Signal Source and Receiver Set-up Procedures...	8
 <b>Chapter 4</b>	
MRK3 SE Reference Calibration Procedure.....	15
 <b>Chapter 5</b>	
MRK3 SE Measurement Procedure.....	20
 <b>Chapter 6</b>	
Single Frequency SE Measurement Procedure.....	23

# CHAPTER 1 – SPECIFICATIONS

## Signal Generator Specifications: Triple frequency output, 101.251MHz.

Parameter	Value	Unit
Frequency range	50 - 155	MHz
Frequency resolution	10	Hz
Frequency Calibration @ 25°C	+/- 1.0	ppm
Frequency Stability (0°-70°C)	+/- 1.0	ppm
Aging	+/- 1.0	ppm/year
SSB Phase Noise		
@1kHz from carrier	-107	dBc/Hz
@10kHz from carrier	-114	dBc/Hz
@100kHz from carrier	-122	dBc/Hz
Wideband noise	<-130	dBc/Hz
Output harmonics	-60	dBc
Sub-harmonics	-75	dBc
Non-harmonic spurious		
30kHz < offset < 380 kHz	-53 max	dBc
380kHz < offset < 1MHz	-47 max	dBc
1MHz < offset < 2.5MHz	-60 max	dBc
Wideband	-70 max	dBc
Output power (500kHz - 400MHz)	12 +/- 1.5dB	dBm
Output impedance	50	Ohms
DC input Voltage	9-15	V
DC input Current	250	mA

MRK3-Tx      Size: 3.6" x 7.9" x 1.3"      Weight: 7.5 oz (no batteries)

## Receiver Specifications:

Parameter	Value	Unit
Frequency range	50 - 155	MHz
IF Bandwidth	8	kHz
Receiver sensitivity	-135	dBm
SE measurement range	0 - >110	dB
SE measurement accuracy	+/-1.0	dB
Input Power (max linear)	+5	dBm
Input impedance	50	Ohms
DC input Voltage	9-15	V
DC input Current	600	mA

MRK3-Rx      Size: 4.9" x 9" x 2.0"      Weight: 14 oz (no batteries)


**Antenna Specifications 2ea:**

Parameter	Value	Unit
Frequency range	50 - 155	MHz
Input impedance	50	Ohms



## CHAPTER 2 – FRONT PANEL


### Signal Source Front Panel

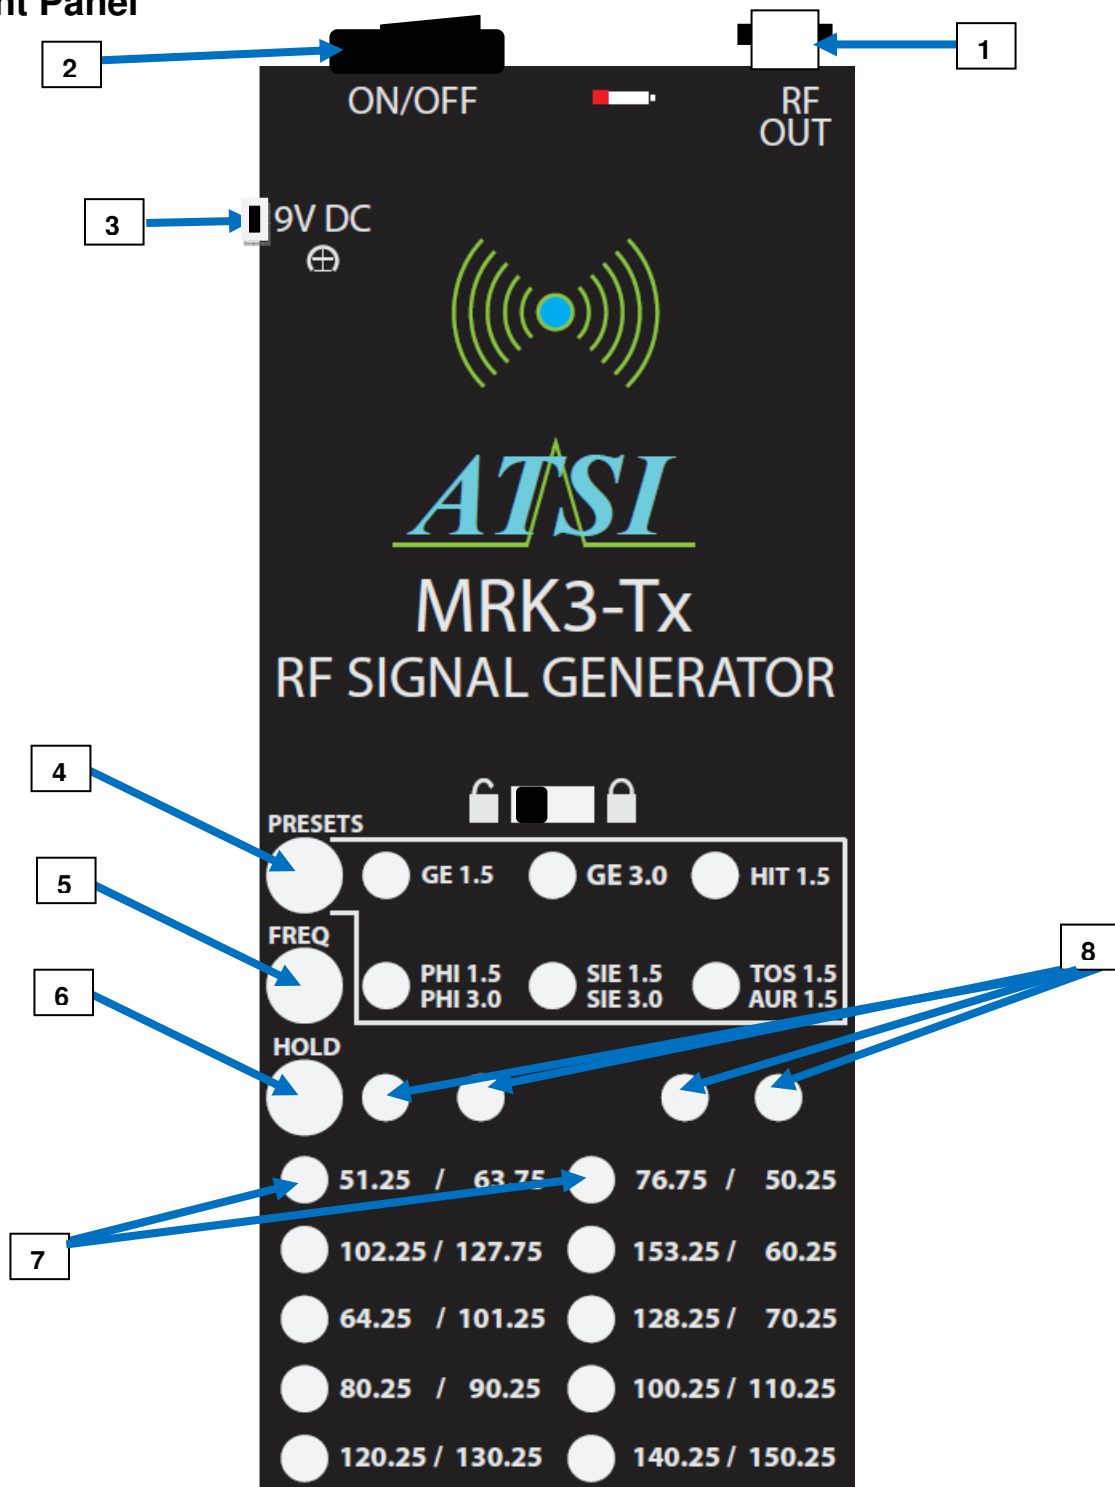

## Signal Source Front Panel

- 1.) BNC Type Female RF Output Connector
- 2.) ON/OFF Toggle Switch
- 3.) 9VDC Input Connector
- 4.) Preset Mode Button
  - a. This button selects the triple preset frequencies for the specified magnets. Each button push cycles to the next set of preset magnet frequencies.
- 5.) Frequency Select Button
  - a. This button selects a single output frequency from the twenty preset frequencies. Each button push cycles to the next preset frequency.
- 6.) Hold Button
  - a. This button is currently NOT ACTIVE
- 7.) LED light indicating the ROW of the active frequency/frequencies.
- 8.) LED light indicating the COLUMN of the active frequency/frequencies.

## Receiver Front Panel

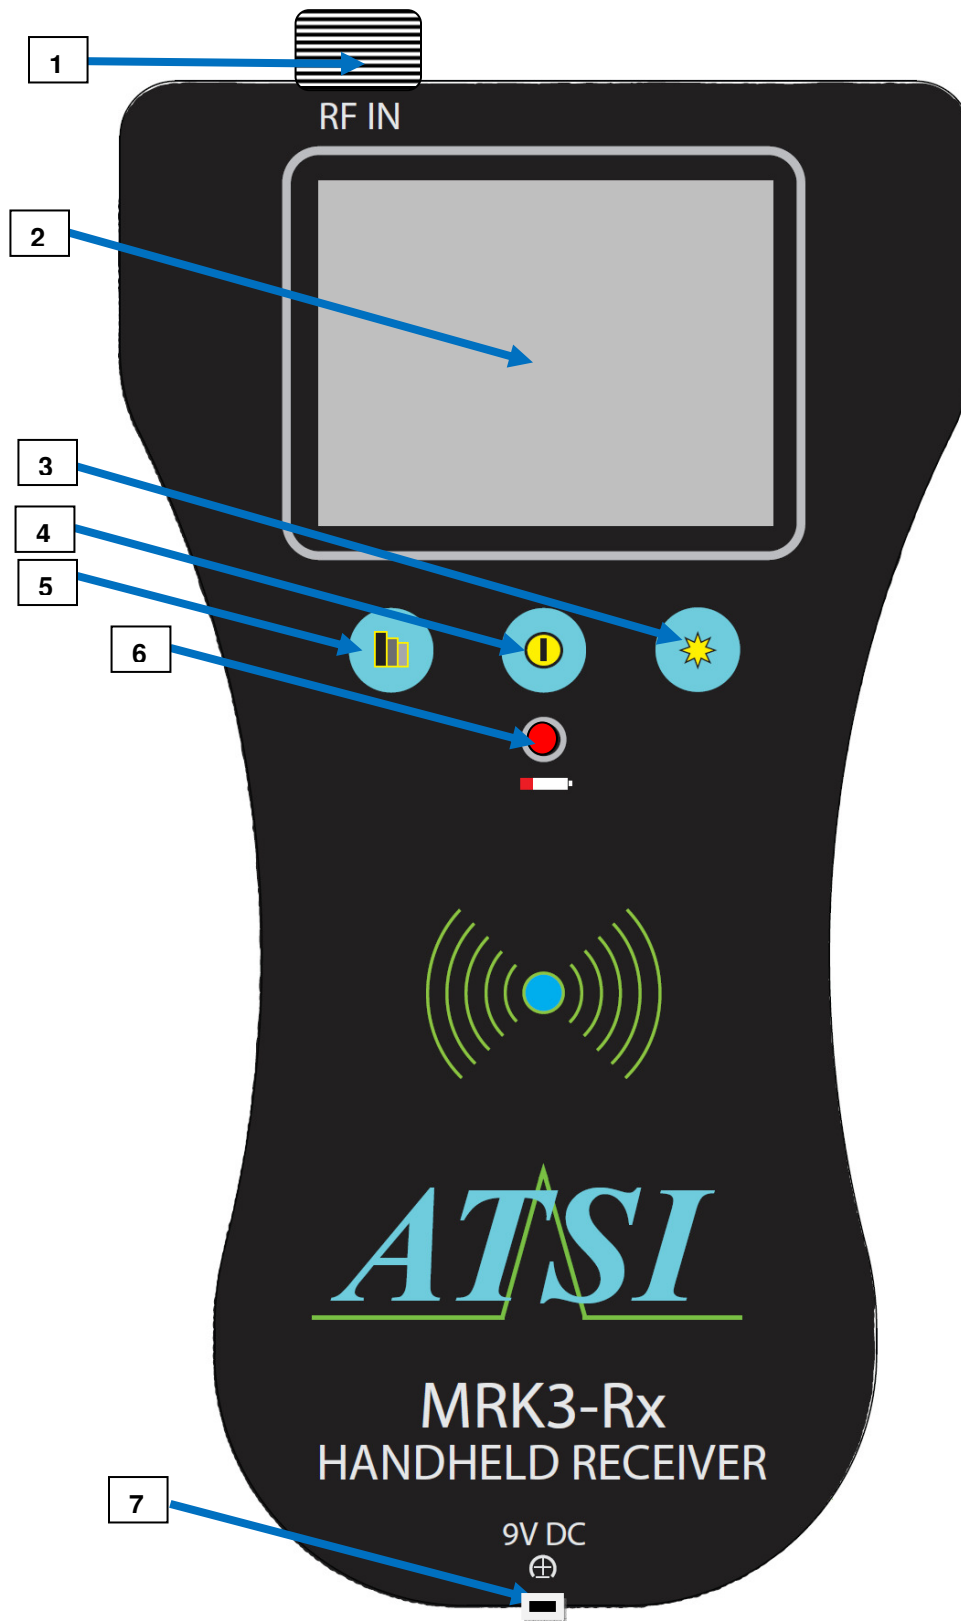

## **Receiver Front Panel**

- 1.) N Type Female RF Input Connector
- 2.) Touch View Screen
- 3.) Brightness Button
- 4.) ON/OFF Button
- 5.) Contrast Button
- 6.) Low Battery Indicator Light
- 7.) 9VDC Input Connector

## **Important Notes:**

### **1. SE MEASUREMENTS:**

**THIS UNIT IS DESIGNED TO ONLY CONDUCT SE MEASUREMENTS WITH THE SIGNAL SOURCE POSITIONED OUTSIDE OF THE SHIELDED ENCLOSURE, AND THE RECEIVE SYSTEM INSIDE THE SHIELDED ENCLOSURE. THE RECEIVER IS HIGHLY SENSITIVE, AND CAN BE SATURATED FROM OUTSIDE AMBIENT RF SOURCES.**

**FOR SE MEASUREMENTS THE MRK3 TEST KIT SHOULD BE USED IN THE CONFIGURATIONS SHOWN IN THE SET UP SECTION OF THIS MANUAL. MODIFICATIONS SUCH AS SUCH AS IN-LINE AMPLIFIERS OR ATTENUATORS SHOULD NOT BE USED.**

### **2. RECEIVER WARM UP:**

**Software Version 2.5:** Units with this software version have temperature compensated power measurements and can be used after a 30 second warm up. (This assumes ambient temperature operating range from 30°F to 130°F, use in ambient temperatures below 30° may require longer warm up time.)

**Software Version 2.3:** Before the first use of the day, the receiver should be turned on for 10-15 minutes and allowed to warm up to operating temperature. The receiver may then be turned off and on without additional warm up if not turned off for more than 20 minutes.

(Software version is displayed on the initial screen when receiver is powered on.)

- ### **3. USING AC ADAPTERS:**
- The AC adapters for the receiver and signal generator are marked with RX and TX labels. AC power may be safely used with rechargeable or alkaline AA batteries installed in the units. (The batteries are NOT charged using the AC adapters)
- ### **4. CHARGING BATTERIES:**
- The rechargeable batteries included in the test kit should be removed from the units and charged with the supplied AA battery charger upon receipt. Powering the signal source and receiver from the AC adapter will not charge the installed batteries. Regular alkaline AA batteries can also be used to power the units.

5. **LOW BATTERY INDICATOR:** The low battery indicators will turn on when batteries levels are getting low. The receiver and signal source can continue to be used with low batteries but will turn off automatically once the battery levels become to low to sustain operation within the performance specifications.
6. **SIGNAL SOURCE MODE FOR S.E. CALIBRATION:** The Signal Source should be left in the same mode while making S.E. measurements as used during the S.E. reference level calibration. If the Signal Source was outputting three frequencies during the S.E. calibration process, it should be set to output the same three frequencies while making S.E. measurements. The same is true when the Signal Source is set to output a single frequency. The output mode needs to be maintained between S.E. calibration and S.E. measurements to ensure the power level is the same during both the calibration and measurement steps. The Signal Source will output a different average power level in single frequency mode than at the same frequency when the triple frequency output mode is used.
7. **CHECKING S.E. MEASUREMENT RANGE:** The S.E. measurement range can be checked by turning off the Signal Source, and measuring S.E. inside the shielded enclosure. Since the Signal Source is turned off, the receiver will show the highest S.E. that can be achieved for the current calibration and measurement setup. The S.E. currently being measured is limited by the internal noise of the receiver and any interfering signals that may be present inside the RF shielded room.
8. **INCREASING S.E. MEASUREMENT RANGE:** Using the Signal Source in single frequency mode can increase the S.E. measurement range over what can be achieved in triple frequency mode. Single frequency mode transmits a higher average power level that will give a higher reference level during the S.E. calibration step and give higher dynamic range during S.E. measurements.

## **CHAPTER 3**

### **MRK3 Signal Source and Receiver Set-up Procedures**

#### **Signal Source Setup:**

Remove Di-Pole antennas from case along with the elements and assemble them by screwing the antenna elements into the antenna heads. Connect the signal generator side antenna to the tripod using the threaded tripod mount. Fully extend tripod legs and raise tripod head. Strap the MRK3 Signal Source to a tripod leg with the velcro tether strap. Connect the RF output of the Signal Source to the antenna with the supplied short RF cable. (No element tuning is required for the supplied antennas). The transmit set-up should look like Figure 1 below.



**Figure 1 – Signal Source Set-up**

## **Receiver Setup:**

Connect the RF input of the MRK3 Receiver to the receive antenna with the long RF cable. (Rx cable is labeled, and has ferrite suppression). Screw antenna elements into antenna head and fully extend elements. (No element tuning is required for the supplied antennas). The receive system should look like the set-up shown in Figure 2.




**Figure 2 – Receive Set-up**




## **MRK3 Signal Source Operation:**

This example of the calibration procedure will be shown for the GE 1.5 triple frequency mode. The same procedure is used for the other modes. Turn the signal source on using the toggle switch on top of the unit as shown here in Figure 3. Push the "PRESETS" button to select the desired magnet type (In this case GE 1.5). The 'PRESETS' button and LED indicators are shown in Figure 4. The Signal Source will output the three test frequencies associated with the selected magnet and indicate the three frequencies being used with LED's on the front panel. These three frequencies are being generated simultaneously and no further output settings need to be adjusted during the reference calibration or measurement process. The signal source may be turned off to save battery life if not being used during MRI evaluations. The signal source will return to its last configuration settings when powered up.

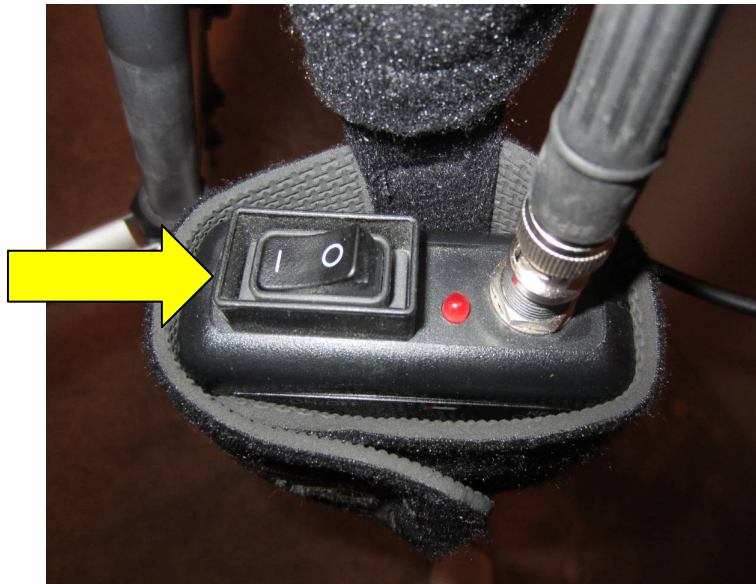

**Figure 3 – Signal Source On-Off Switch**

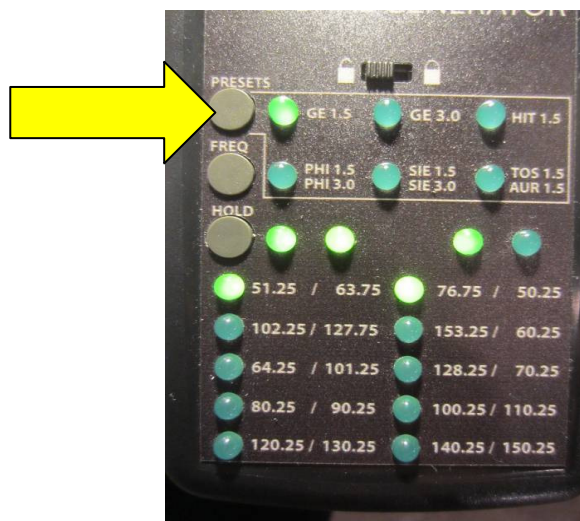

**Figure 4 – Presets Button set to GE 1.5**

The output frequencies for triple output mode are as follows:

<b>GE 1.5</b>	<b>51.251 MHz , 63.751 MHz, 76.751 MHz</b>
<b>GE 3.0</b>	<b>102.251 MHz, 127.751 MHz, 153.251 MHz</b>
<b>All Others</b>	<b>64.251 MHz, 101.251 MHz, 128.251 MHz</b>

### **MRK3 Receiver Operation:**

Setup MRK3 Signal Source and select the required transmit frequency mode according to the instructions in the Signal Source Setup and Operation sections above. Setup the MRK receiver according to the instructions in the MRK3 Receiver Setup section and turn on receiver by pushing the center button below the screen as shown in Figure 5.




**Figure 5 – ON-OFF Button for Receiver**

## **CHAPTER 4**


# **REFERENCE CALIBRATION PROCEDURE**

Before RF shielding effectiveness measurement can be taken, a reference calibration must be performed with the system. The procedures for this are as follows. Place the Di-pole source and receive antennas, oriented horizontally, in an open area with the receive antenna held approximately 2 meters away from the source antenna. Ensure that the receive antenna is held at about the same height above ground as the source antenna. Ensure there are no objects between or around the two antennas that could significantly affect the strength of the RF signal. The antenna orientation/positioning is shown in Figure 6.

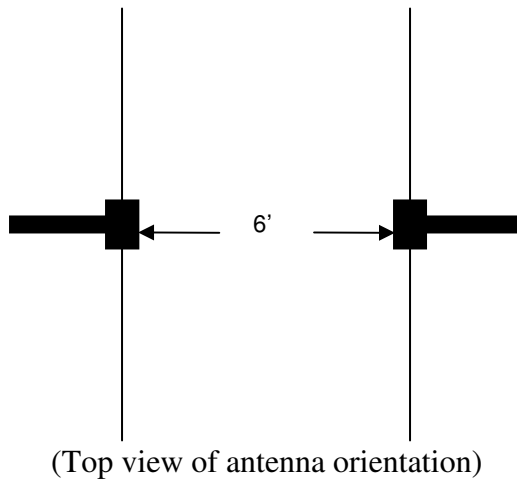

**Figure 6 – Antenna Positioning for Reference Calibration**

From the home screen (Figure 7) on the receiver unit, tap the "Mode" button. This will display the mode selection screen (Figure 8).

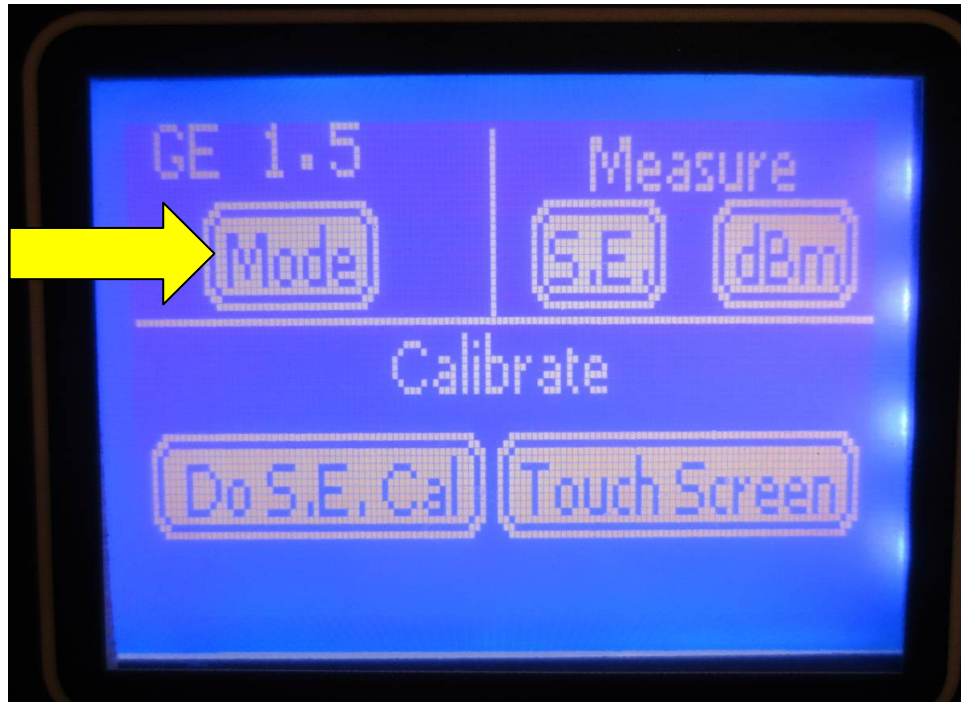

**Figure 7 – Home Screen**


Select the button for the desired magnet type. This will set the three frequencies of operation for the receiver. (This example will be for GE 1.5). Once the magnet is selected it will return to the home screen (Figure 9).



**Figure 8 – Magnet Selection Screen**



To perform the reference calibration for the three frequencies select the **"Do S.E. Cal"** button from the home screen (Figure 9). This will display the Reference Calibration Screen (Figure 10).

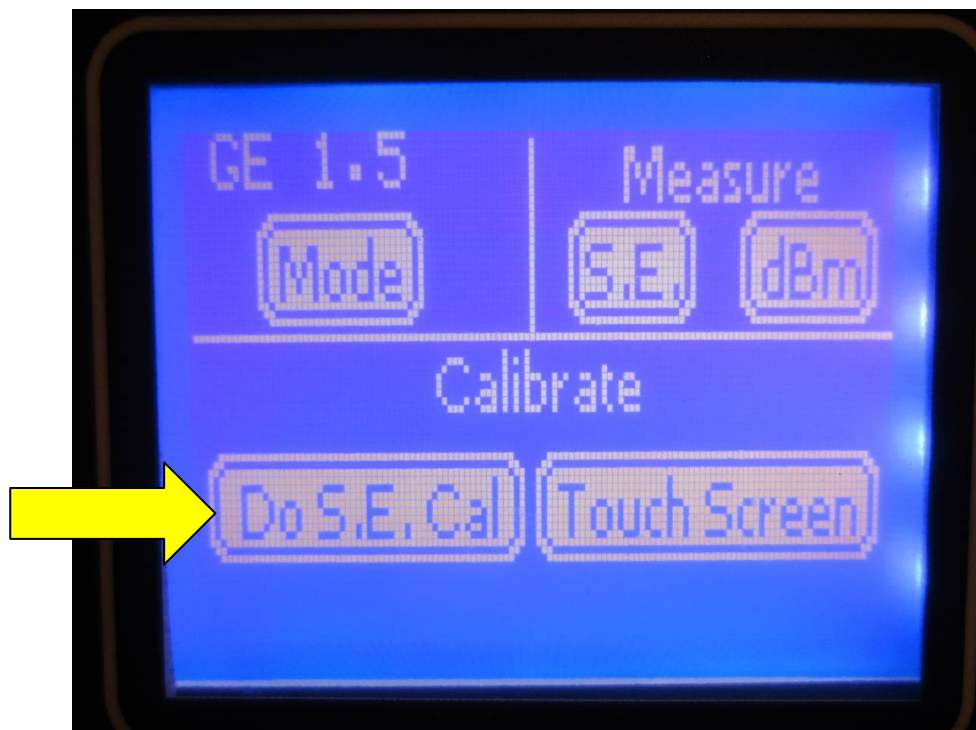


**Figure 9 – Return to Home Screen**




**Figure 10 – Reference Calibration Screen**

On the Reference Calibration Screen there will be a numeric display of the reference level power for the current calibration frequency. There is also a bar graph indicating the received power level. This power level needs to be below the 'Max' line to avoid saturating the receiver which will result in inaccurate S.E. readings. The power level should also not be below the 'Low' area to ensure a dynamic range of greater than 100dB is achieved. An example of the acceptable power region is shown in Figure 10. The receive antenna should be moved up and down slightly until the highest received power is achieved. If the power level is too high or too low, the reference calibration should be performed in a more open area to reduce reflection of the RF signal from surrounding objects which can affect the received power level of the system.


Once a good receive power level is achieved, hold the receive antenna in place and tap the "**Cal Now**" button to set the reference level for the S.E measurement at the active frequency. See Figure 11. The calibration screen for the next frequency will automatically be displayed after the current frequency reference calibration is complete. See Figure 12 and 13. Calibrate the reference level for the other two frequencies in the same manner as the first. The calibration for all three frequencies is now complete. The home screen will now be displayed again. These reference calibration levels are stored in the receivers' non-volatile memory until another reference calibration is fully performed at this same preset frequency regardless of whether the SE calibration is performed in single or triple frequency mode. The receiver may be turned on and off without affecting any of the reference calibration values.

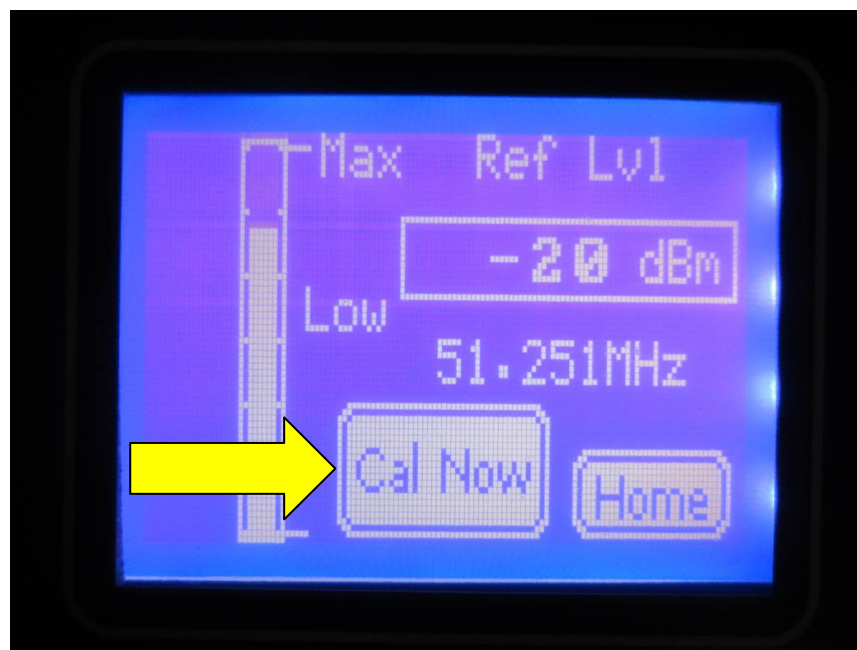

**Figure 11 – Reference Calibration Screen**

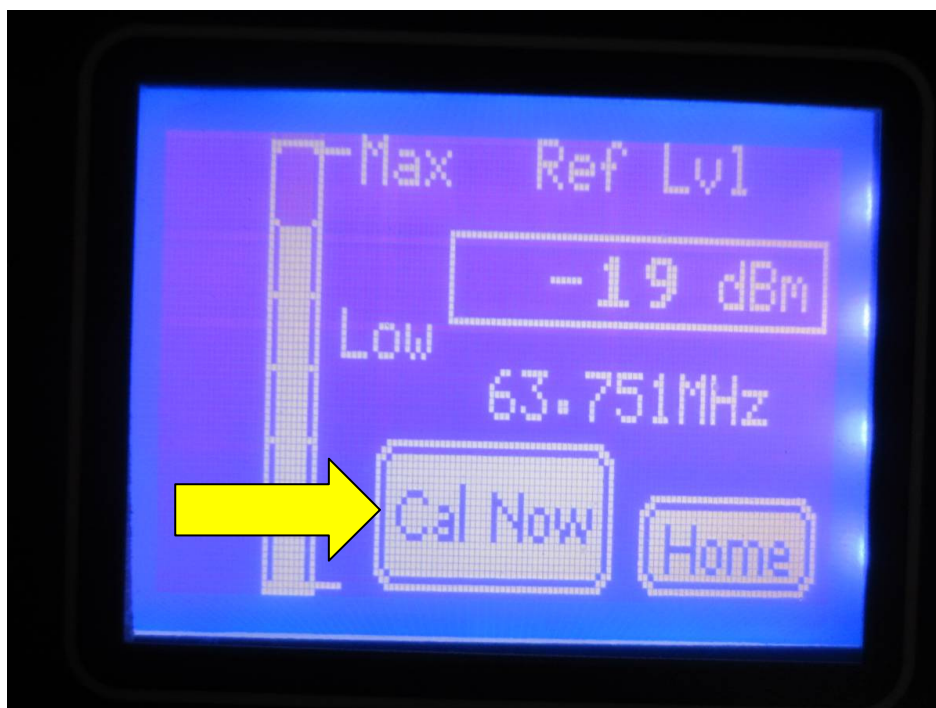

**Figure 12 – Reference Calibration Screen (Next Frequency)**

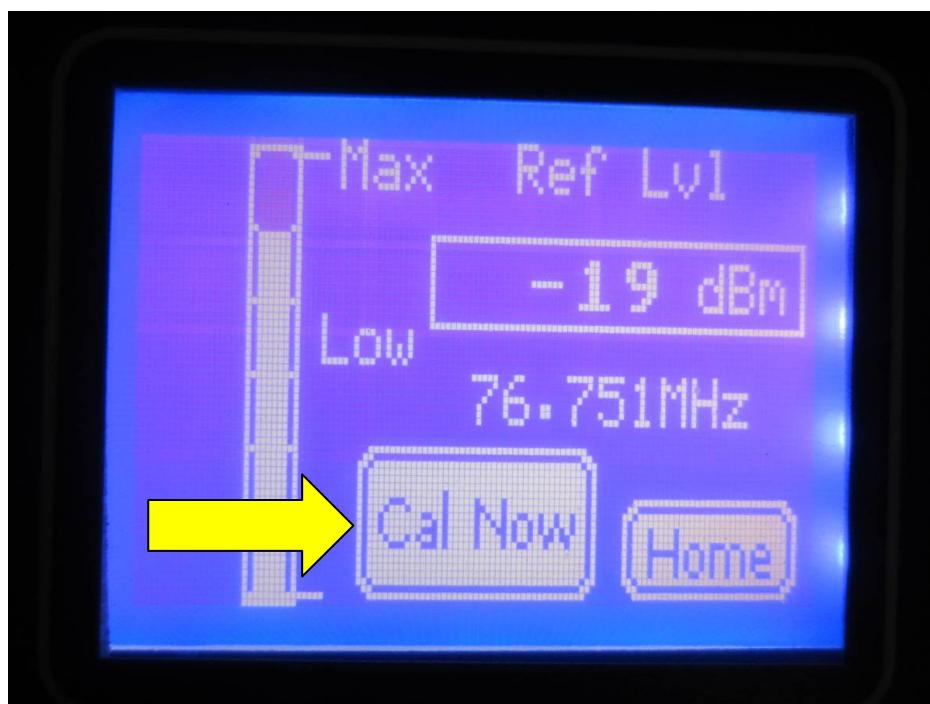

**Figure 13 – Reference Calibration Screen (Next Frequency)**

***NOTE: The Reference Levels should be manually recorded so they can be used with dBm mode measurements if necessary.***




## **CHAPTER 5 – SE MEASUREMENT PROCEDURE**

The following procedures can be used to perform a shielding effectiveness (S.E.) measurement in a magnet mode that has had a reference calibration performed. Place the transmit antenna outside of the shielded room with the elements horizontal and parallel to the wall of the shield being tested. See Figure 14. The calibration distance of 2 meters should be maintained between the two antennas during the SE testing. The transmit antenna is usually placed at 1.7 meters from the surface of the shield to achieve uniform radiation of the exterior wall, while the receive antenna is used to scan the interior of the wall to locate RF leaks. An example of a measurement setup that meets most testing standards would be as follows: Transmit antenna is placed 1.7meters from outside surface of shield. The receive antenna is positioned .3meters from the inside surface of shield. The total measurement distance is 2 meters. Although the measurement distance is not exactly maintained while scanning the receive antenna from the floor to the ceiling of the shield, the effect of this slight distance change has a negligible effect on the S.E. measurement for single level rooms.



**Figure 14 – Signal Source Test Set-up in front of ATSI RF Shielded Anechoic Test Chamber**

From the home screen tap the "S.E." button in the measure area. See Figure 15.

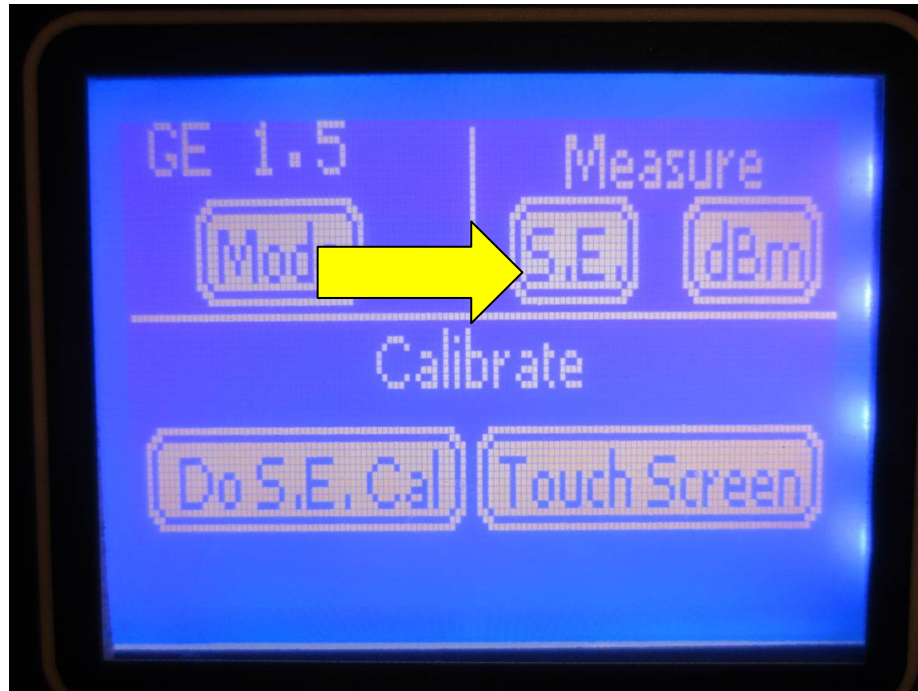

**Figure 15 – Home Screen (Select SE)**

Bring the receiver system inside of the shielded enclosure and ensure that all shield openings have been properly closed. The S.E. for the three frequencies is displayed numerically and with a bar graph on the screen of the receiver. See Figure 16.



**Figure 16 – SE Screen with 3 Frequency Display**

SE measurements can be taken by scanning the inside of the shield wall with the receive antenna at the appropriate distance. See Figure 17. Normally a maximum 12'x12' foot section of wall can be tested with the Signal Source in a single position. Additional sections of wall should be tested by moving the Signal Source and receiver to the center of that section of the wall.



**Figure 17 – Scanning Inside of ATSI RF Shielded Anechoic Test Chamber**

The measurement range on the SE screen is between 50 and 110 dB of attenuation for each frequency. For RF leaks that register lower than 50 dB, the receiver can be used in dBm mode and the range adjusted to measure the absolute power of the RF leakage and compare it with the reference level recorded during the Reference Calibration procedure to calculate the SE. The reference level cannot be recalled from the receiver so it would need to have been recorded by the user during the S.E. reference calibration procedure in Chapter 4.


**NOTES:**



## **CHAPTER 6 – SINGLE FREQUENCY MEASUREMENTS**


The measurement procedures for the “Single Frequency” mode are the same setup procedures for both the Signal Source and receiver with the exception of the following:

The Signal Source “Frequency Select” button will be depressed until the frequency of choice is selected with the LED lights lit in the column and row of the frequency you want. Figure 17 shows 64.251MHz as the active frequency.

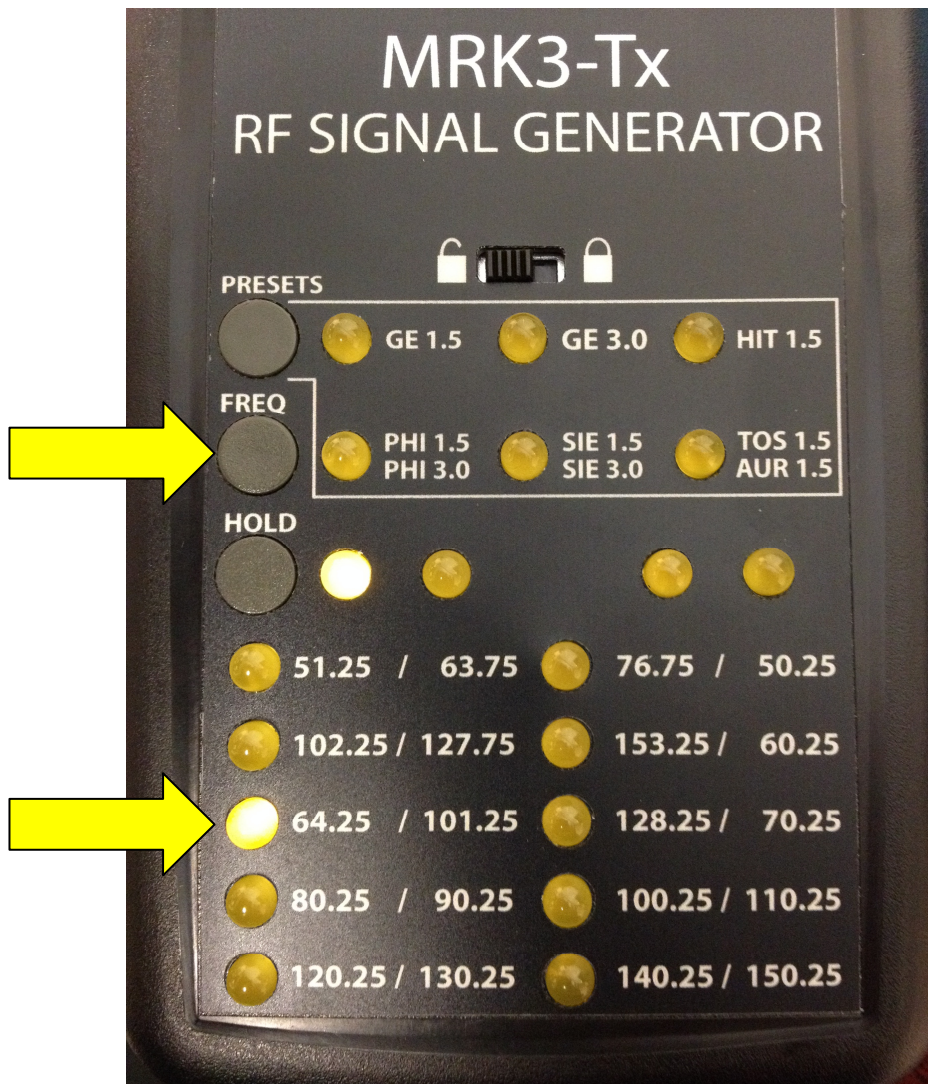

**Figure 17 – Single Frequency Selection**

The receiver “Mode” button will be tapped when in the “Home Screen”. (Figure 18)

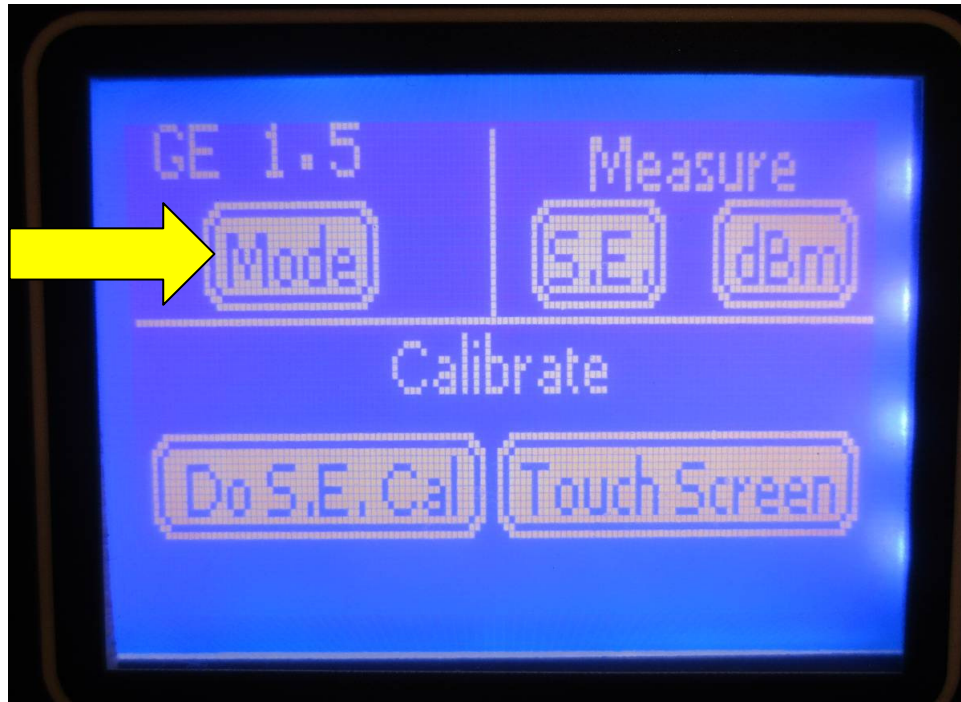


**Figure 18 – Home Screen**

Tap/select the “Single” button as shown in Figure 19. This will display the single frequencies available for selection. (Figure 20)



**Figure 19 – Mode Selection Screen**

Now select the frequency you wish to use from the frequency selection screen displayed. If you hit “NEXT”, other available frequencies will be displayed. The selectable output frequencies in MHz for single frequency mode are 50.251, 51.251, 60.251, 63.751, 64.251, 70.251, 76.751, 80.251, 90.251, 100.251, 101.251, 102.251, 110.251, 120.251, 127.751, 128.251, 130.251, 140.251, 150.251, 153.251. (Figure 20)

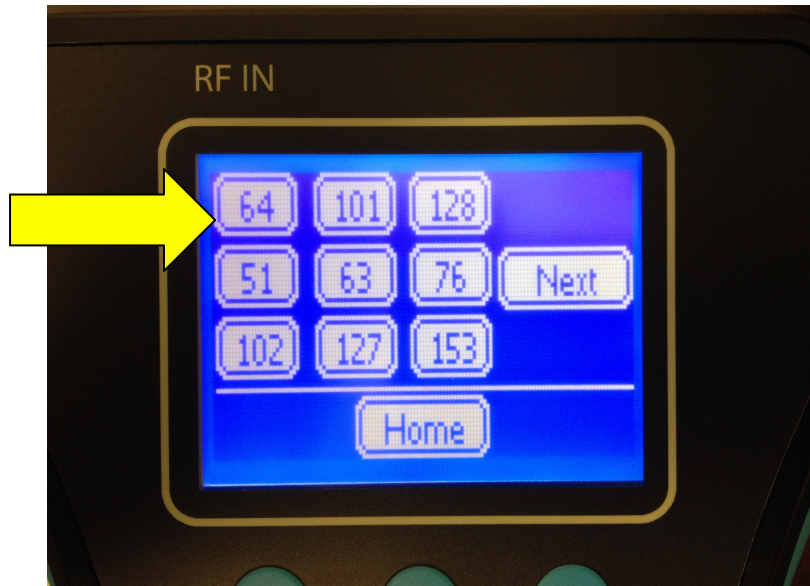

**Figure 20 – Frequency Selection Screen**

Once you select the frequency it will return you to the home screen. Then you can conduct your calibration in the same manner as in Chapter 4 by selecting “Do SE Cal” , and then conduct your SE measurement as in Chapter 5 by selecting the SE button from the Measure area. The display for that frequency will come up in SE measuring mode. (Figure 21)



**Figure 21 – Single Frequency SE Screen**





**(THIS PAGE LEFT INTENTIONALLY BLANK)**

## **ADVANCED TESTING SERVICES, INC.**

9420 San Mateo Blvd. NE, Suite C  
Albuquerque, New Mexico  
87113

Phone: 505-292-2032

Fax: 505-237-8430

Website: [www.advanced-testing.com](http://www.advanced-testing.com)